



AUTOMOTIVE ACCESSORY  
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD  
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand  
PO Box 11286, Ellerslie, Auckland 1542 New Zealand  
PH +64 (9) 276-9826 Fax +64 (9) 276-9836  
[info@airplex.co.nz](mailto:info@airplex.co.nz) [www.airplex.co.nz](http://www.airplex.co.nz)

## FITTING INSTRUCTIONS FIT1161

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


# BYD TANG 2021+

# BG642D


MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Test Bonnet Guard on the bonnet and note the 4 holes in bonnet that correspond with pre-drilled holes in Bonnet Guard.

3. Fit Bonnet Guard in position and fasten securely with supplied plastic "push pins" as shown in diagram.

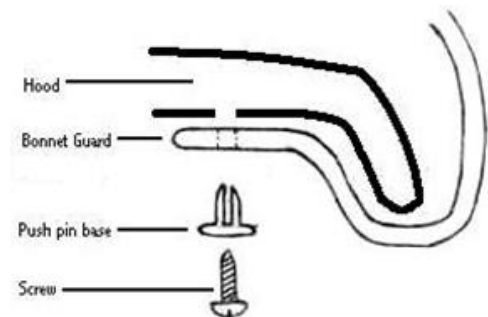

4. Fit the plastic "W" clips to the 2 holes at the outer edge of the Bonnet Guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard. Use the supplied alcohol prep-pads to cleanse the area first.

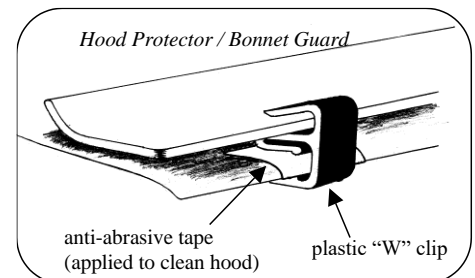

**Some vehicles will have a "rubber weather-strip" attached to the underside of bonnet. If so, insert the bonnet guard between the bonnet and the weather-strip**

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET PROTECTOR.***