

## FITTING INSTRUCTIONS FIT1215


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

# BONNET GUARD SILVERADO HD 2500 2020+


## BG665BW

MADE IN NEW ZEALAND

1. Clean and open the bonnet.
2. Trial fit the Bonnet Guard and note the 3 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.
3. Remove 3 plastic fasteners.
4. Fit Bonnet Guard in position. Press in firmly to secure push pin base and fasten securely with supplied screw.  
Note: Push pin base can be hard to install. Press firmly.  
Note sequence as per diagram as below.

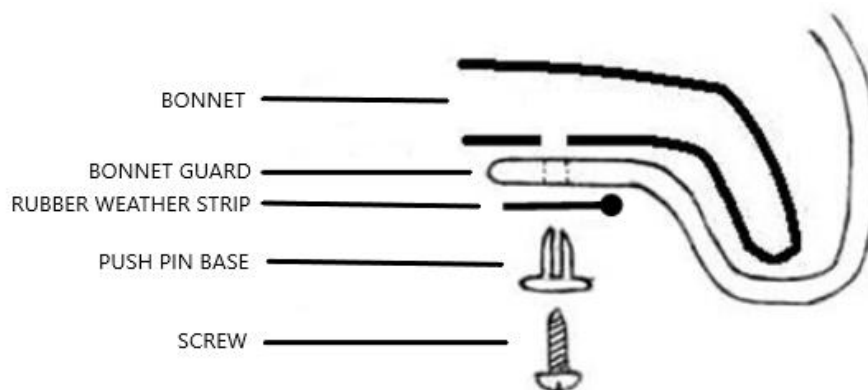

5. Apply the anti-abrasive tape on edge of hood where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
6. Snap the supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

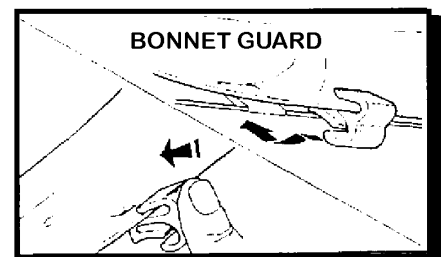

Wash acrylic with a mild soap and lukewarm water solution, using a clean soft cloth or sponge.

**CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD**