

FITTING INSTRUCTIONS FIT954


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

FORD RANGER PX 2015+


BG556D

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 3 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.
3. Remove 3 plastic fasteners.
4. Fit Bonnet Guard in position and fasten securely with supplied screw. Starting with the middle screw to help hold bonnet guard in place. Note sequence as per diagram as below.

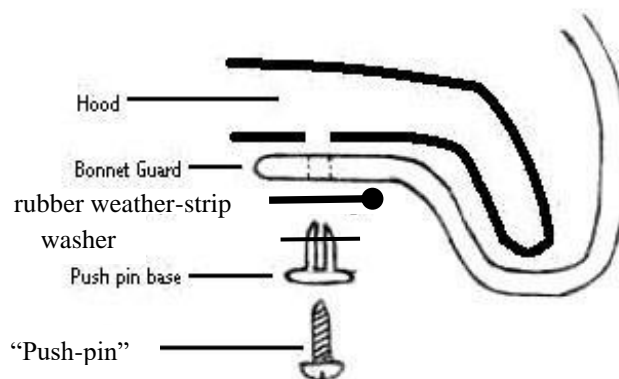

5. Apply the anti-abrasive tape on edge of hood where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
6. Snap the supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

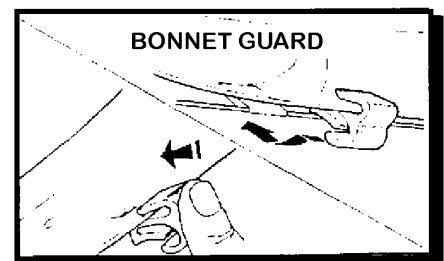

Wash acrylic with a mild soap and lukewarm water solution, using a clean soft cloth or sponge.

**CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD**