



MONTERINGSANVISNING  
EXTRA BACKLJUS



MOUNTING DESCRIPTION  
ADDITIONAL REVERSING LIGHTS



MONTAGEANLEITUNG  
ZUSÄTZLICHE RÜCKFAHRSCHLEINWERFER



**Make**  
Ford

**Model**  
Transit

**Year**  
2014-

**Article Code**  
2626-832





30 min



13

Nr	Andring	Datum	Godk.
A		2020-04-14	

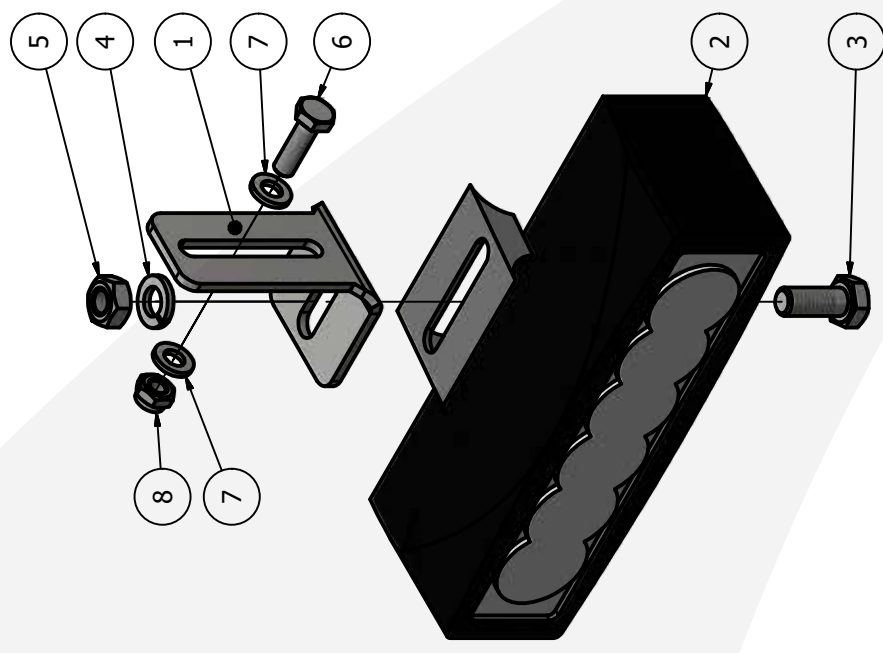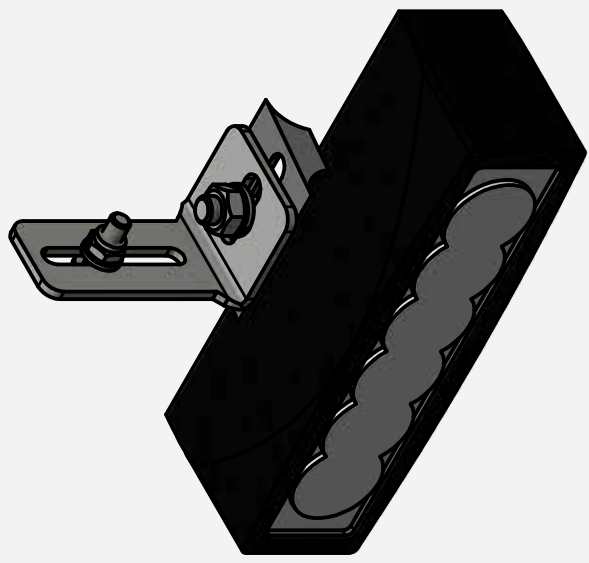

8	2	Låsmutter - Rostfritt stål - M6	Rostfritt stål	931-25206000
7	4	Bricka - Rostfritt stål - M6	Rostfritt stål	931-41506000
6	2	Bult - Rostfritt stål - M6 x 20	Rostfritt stål	931-12106020
5	2	Mutter - Rostfritt stål - M8	Rostfritt stål	Ingår tillsammans med 9022-A18
4	2	Låsbricka - Rostfritt stål - M8	Rostfritt stål	Ingår tillsammans med 9022-A18
3	2	Bult - Rostfritt stål - M8 x 20	Rostfritt stål	Ingår tillsammans med 9022-A18
2	2	Arbetsbelysning SLIM   18W		9022-A18
1	2	Fäste backljus - 9022-A18	Rostfritt stål	930-33031
Pos	Ant	Beskrivning	Material	Artikelnummer

Konstruktör	Ritad av	Skala	Exakt	ES:alt av
MH	MH			
<b>AB Maho</b>		<b>TRANSPORT</b>		
Tel: +46(0)500 22 14 80		S T Y L I N G		
email: info@abmah.se		ASSEMBLY		
		2020-04-14		
		Assembly - 2626-832		

