


FITTING INSTRUCTIONS FIT1018

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

HONDA CRV 2018+


P/NBG661D

1. Clean and open bonnet.
2. Position the Bonnet Guard on the hood and note the hole positions and remove the plastic retaining clips which hold the "rubber weather strip" in place.
3. Insert the tabs of the Bonnet Guard between the rubber weatherstrip and the bonnet.
4. Fasten Bonnet Guard with the supplied push pin bases & steel screws, first through the rubber weather-strip, and then through the Bonnet Guard and into the hole in the bonnet.

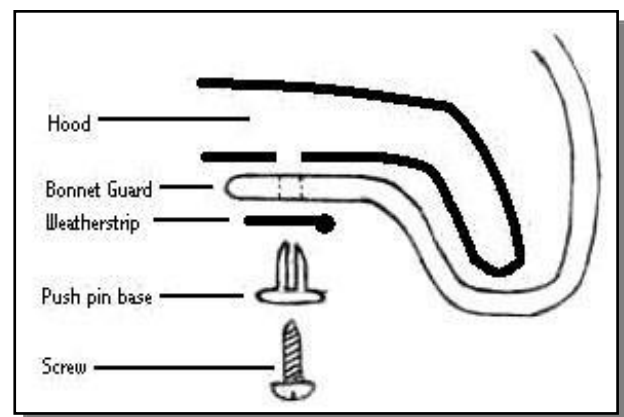

Note: Hold the push-pin base when fixing Bonnet Guard to vehicle to ensure firmly tightened.

5. Stick the anti-abrasive tape on edge of the Bonnet where the supplied plastic fastening clip secures the Bonnet Guard near the fenders.
6. Snap the plastic clips into hole positions on Bonnet Guard as shown, over the anti-abrasive tape.

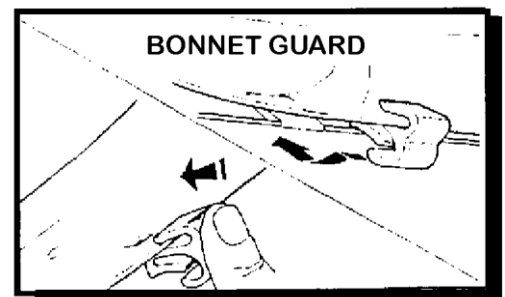

**CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET PROTECTOR.**

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.