

FITTING INSTRUCTIONS FIT1123


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

KIA SPORTAGE 2021+

BG637D

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Test Bonnet Guard on the bonnet and note 4 weather-strip fasteners in bonnet that correspond with 4 pre-drilled holes in Bonnet Guard.
3. Remove the 4 plastic fasteners.
4. Fit Bonnet Guard in position, then rubber weather-strip and fasten securely with supplied plastic "push pin" bases and steel screws, as shown in the diagram below.

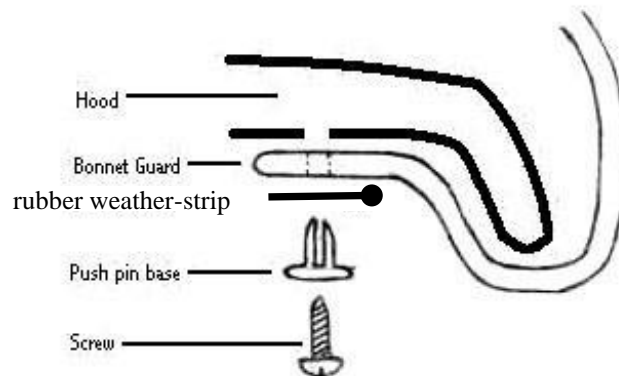

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.