

## FITTING INSTRUCTIONS FIT1089


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

# LDV DELIVERY 9

# BG621

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Position the Bonnet Guard on the Bonnet and note the 2-hole positions.
3. Fasten Bonnet Guard with 2 supplied push pin bases & screws, and then through the Bonnet Guard and into the hole in the bonnet.
4. Note: Hold the push-pin base when fixing Bonnet Guard to vehicle to ensure firmly tightened.
5. Stick the anti-abrasive tape on edge of Bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
6. Snap plastic clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

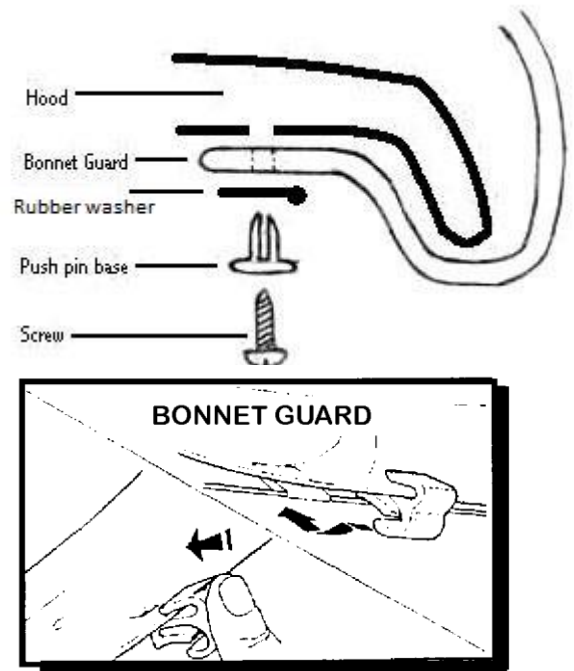

Bonnet adjustment: After fitment of Bug Guard, it is important to check if there is sufficient room between the Bonnet and the grille. Close Bonnet slowly to determine if room is sufficient. If doubtful, it is advisable to adjust the Bonnet stops to allow more room.

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET PROTECTOR.***