

FITTING INSTRUCTIONS FIT1297


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

BONNET GUARD TESLA MODEL Y

BG656D

MADE IN NEW ZEALAND


1. Open the Bonnet.
Clean and dry the area where the bonnet guard is to fit – both the top side and underneath.
2. Hold bonnet guard against bonnet and mark where the double-sided tape will stick. Apply adhesion primer to mark area to help the double-sided tape to adhere.
3. Peel the backing strip from the 3M double sided tape.
4. Place the Bonnet Guard into position on the Bonnet ensuring it is centrally located.
5. Firmly hold the bonnet guard in position to allow the 3M tape to bond.
6. Install bumpon to the bonnet. (Use supplied alcohol wipes to clear the area before installaing bumpon) Under the far corners of the bonnet guard (on both sides) to prevent the bonnet guard rubbing and damaging the bonnet paint work.

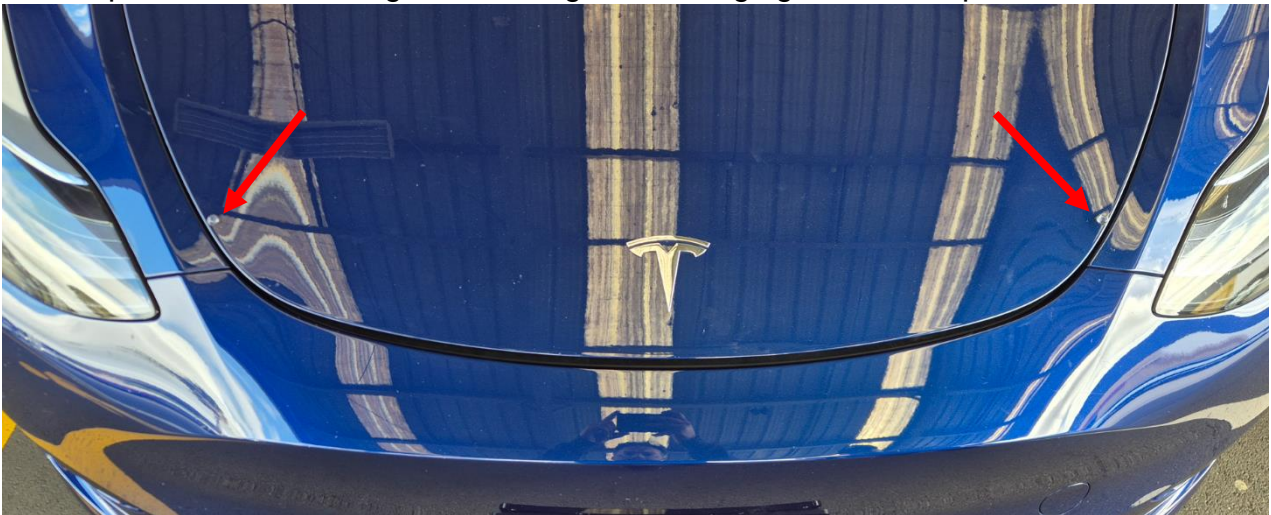

airplex

AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

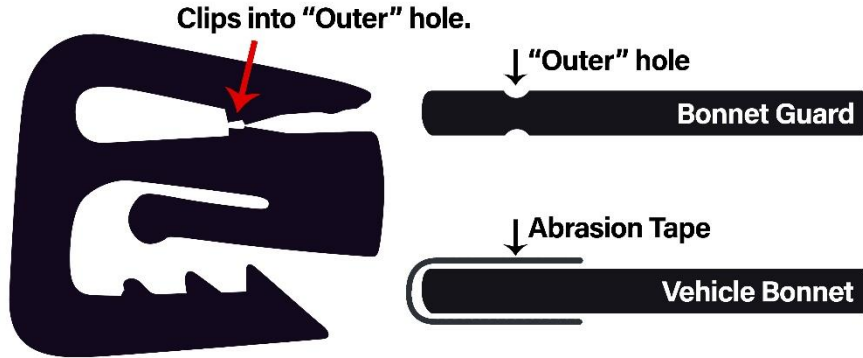

*CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET PROTECTOR.*